PRAMAC | Service & Parts

Spare Parts Catalogue

PMD5000s STAGE V


Consumer Power | Generating sets

Valid for machine code: PR452SXAY00


Revision: 0

PRAMAC

PMD5000s Stage V- Canopy Assy

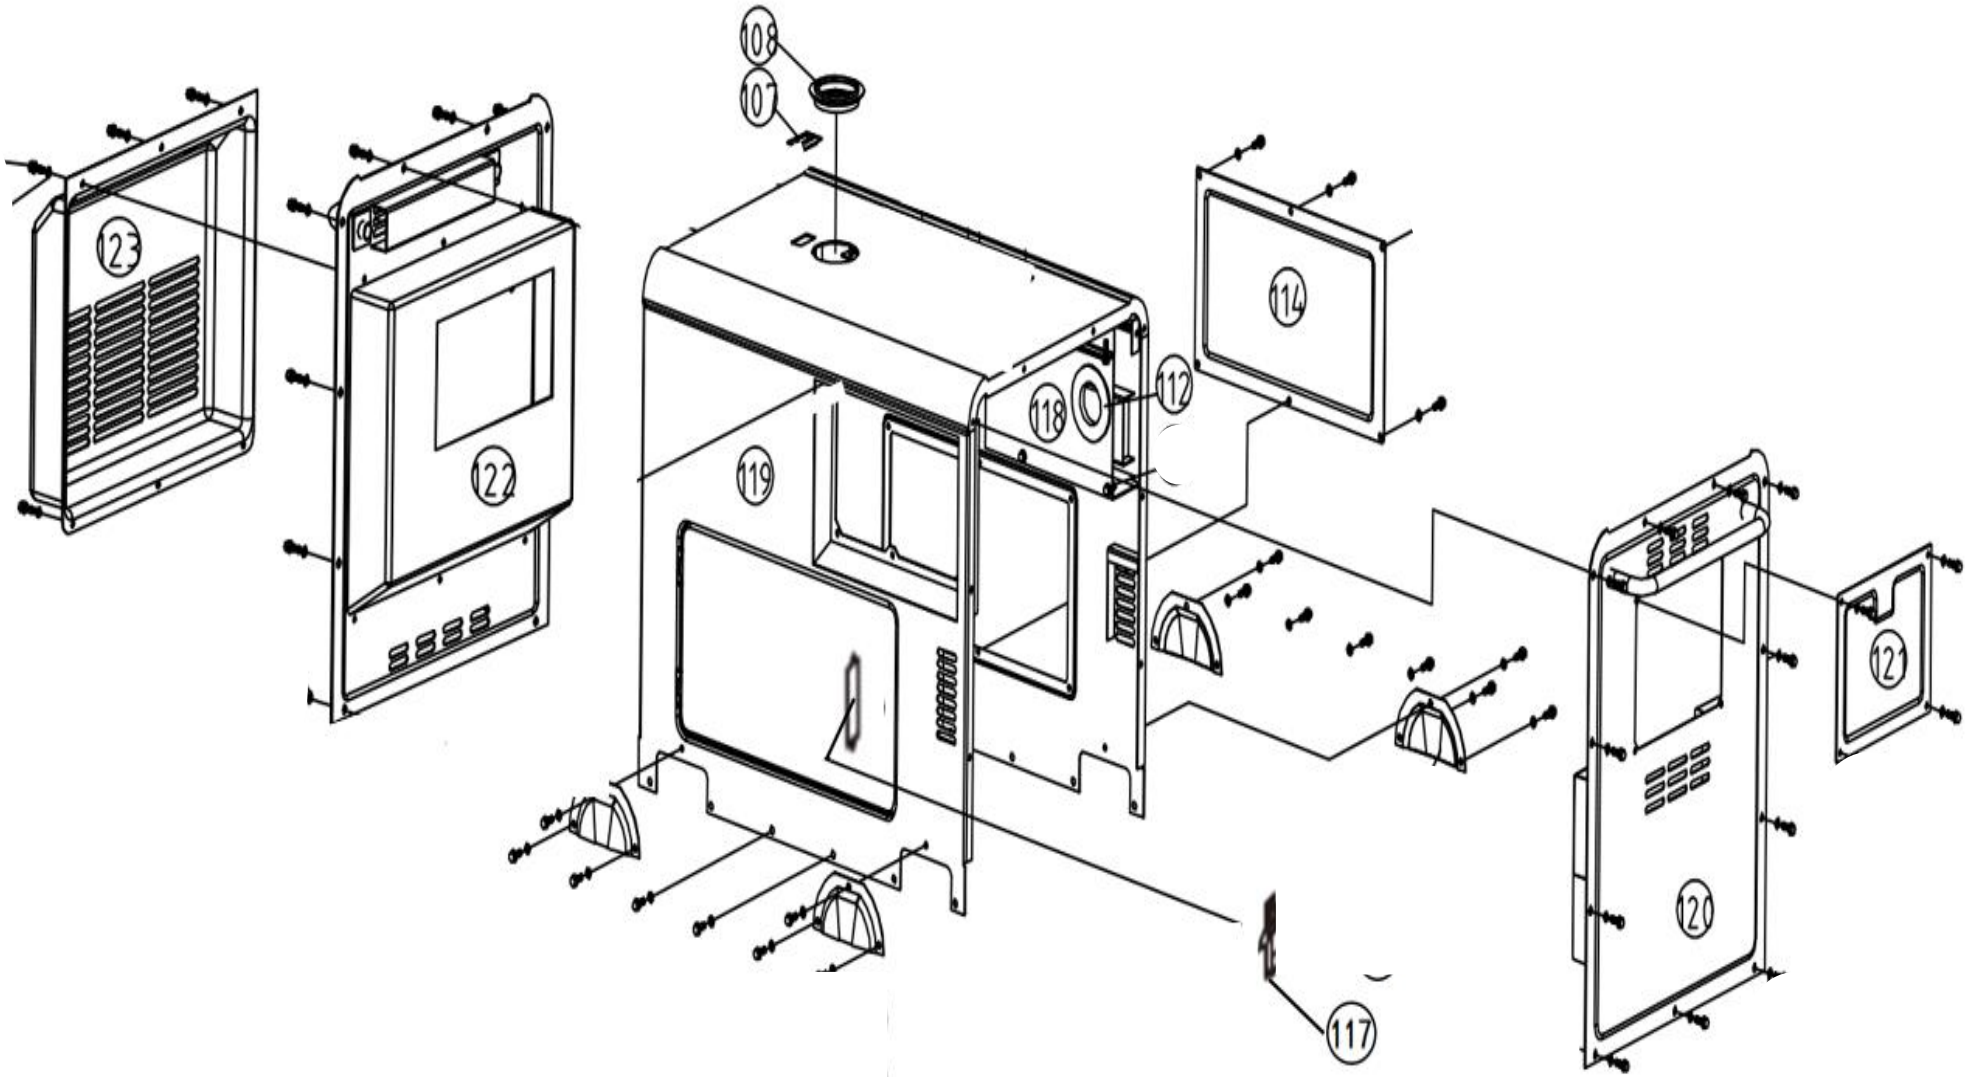


Position	Part Number	Description	Note
107	PEG8.01.001602	fuel leveler rubber	
108	PEG8.01.001603	fuel leveler rubber	
114	PEG8.01.001605	rear cover plate	
115	PEG8.01.001606	wheel guard plate	
117	PEG00073	Door Lock PMD5000s/PMD5050s- until 2017	
117	PEG00087	DOOR LOCK PMD5000s-PMD5050s (with round bottom) from 2021	
118	PEG8.01.001608	filter seal plate	
119	PEG00091	canopy body	
120	PEG00062	right plate	
121	PEG8.01.001611	canopy body	
122	PEG00060	left plate	
123	PEG00063	muffler cover	

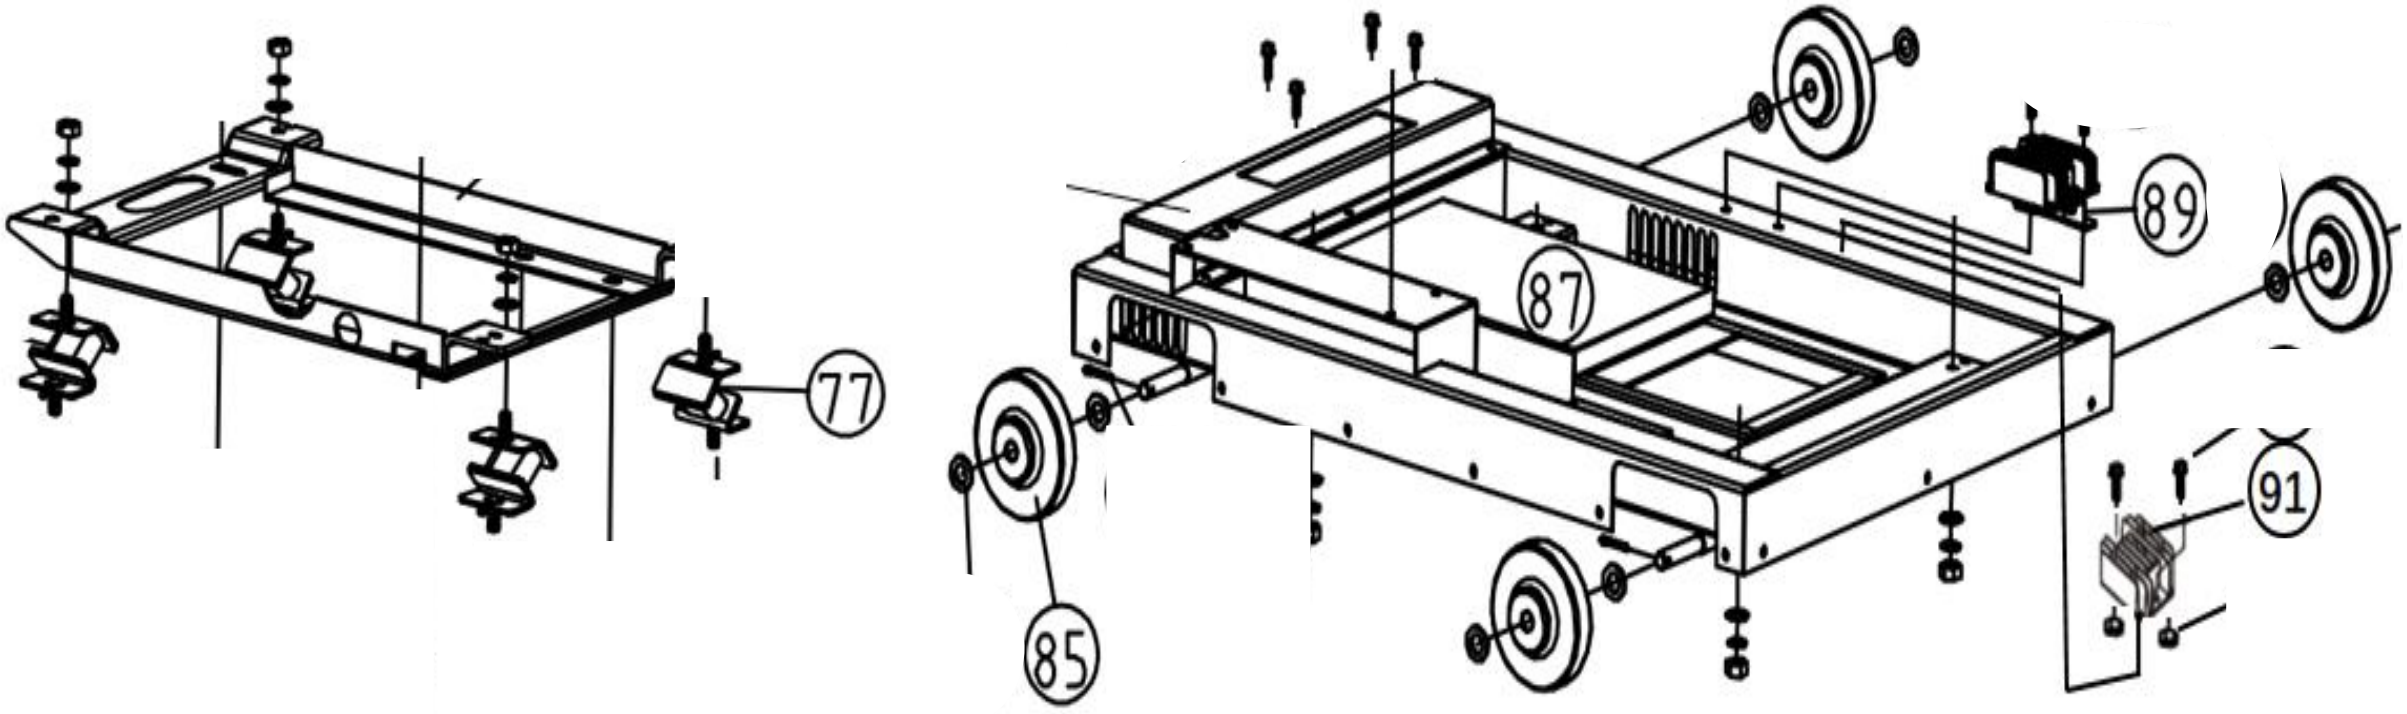


Position	Part Number	Description	Note
77	PEG00069	shock absorber seat	
85	PEG00011	4-inch wheel	
89	PGT00141	AVR	
91	PEG00023	regulator	

PMD5000s Stage V- Fuel tank assembly

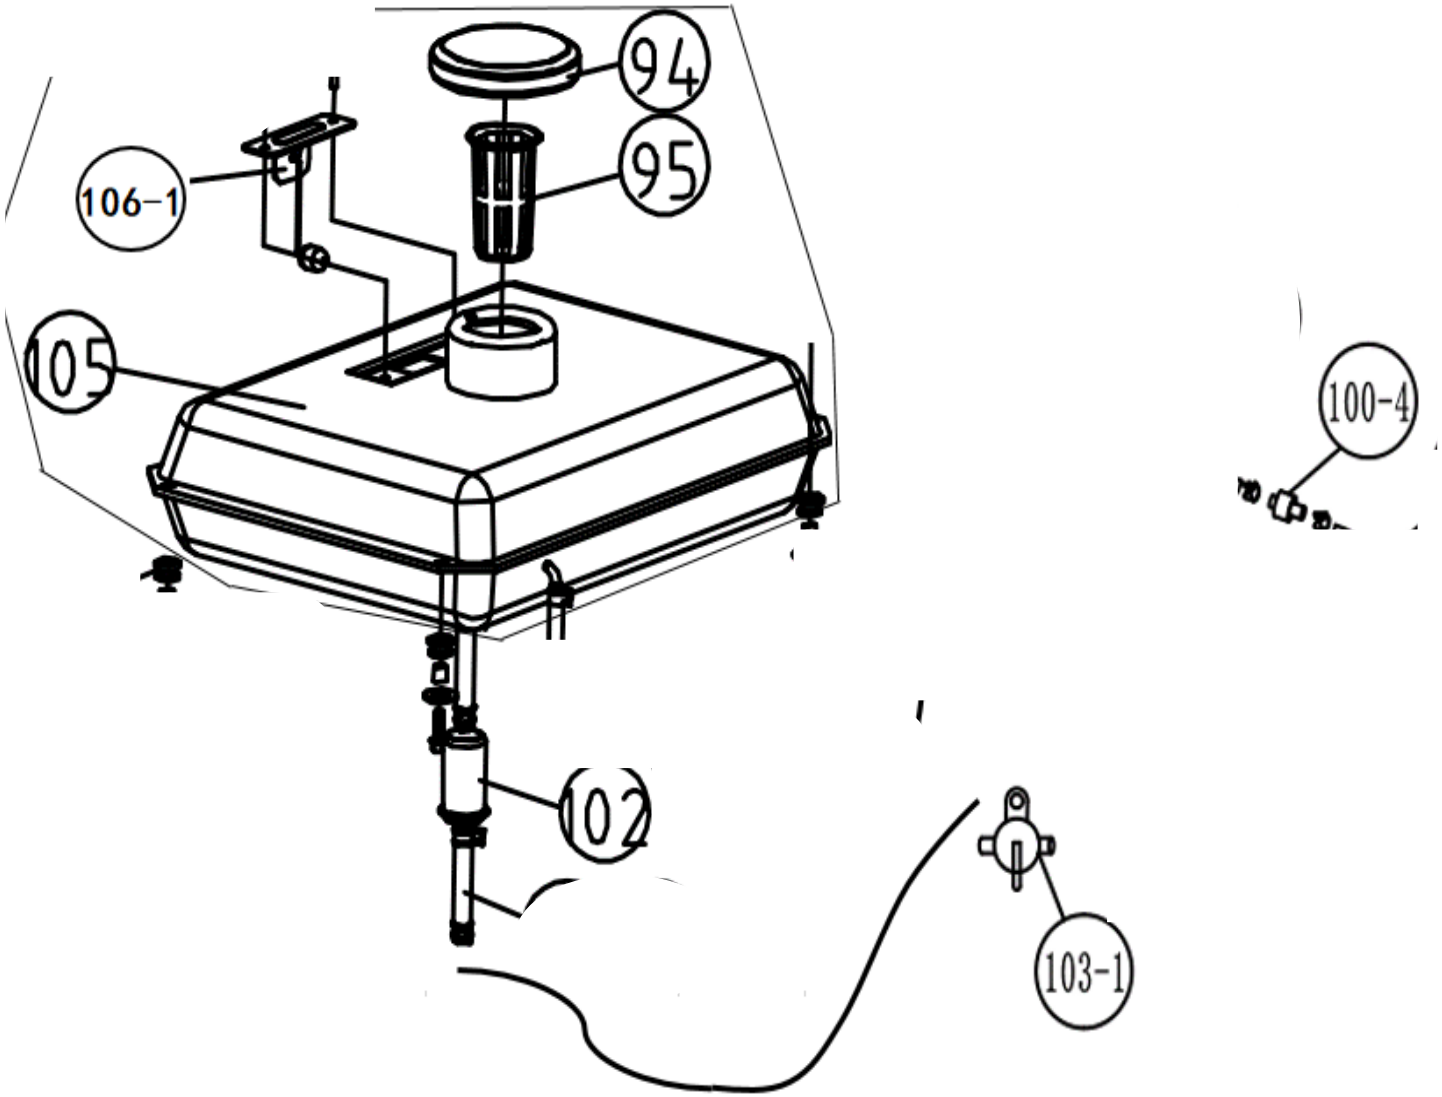


PMD5000s Stage V- Fuel tank assembly

Position	Part Number	Description	Note
94	PEG00015	cap, fuel tank	
95	PEG00065	fuel filter	
100-4	PEG00089	one way valve	
103-1	8.01.001480	fuel cock	
102	G080101	Fuel filter	
105	PEG00014	fuel tank	
106-1	PEG8.01.001586	fuel leveler	

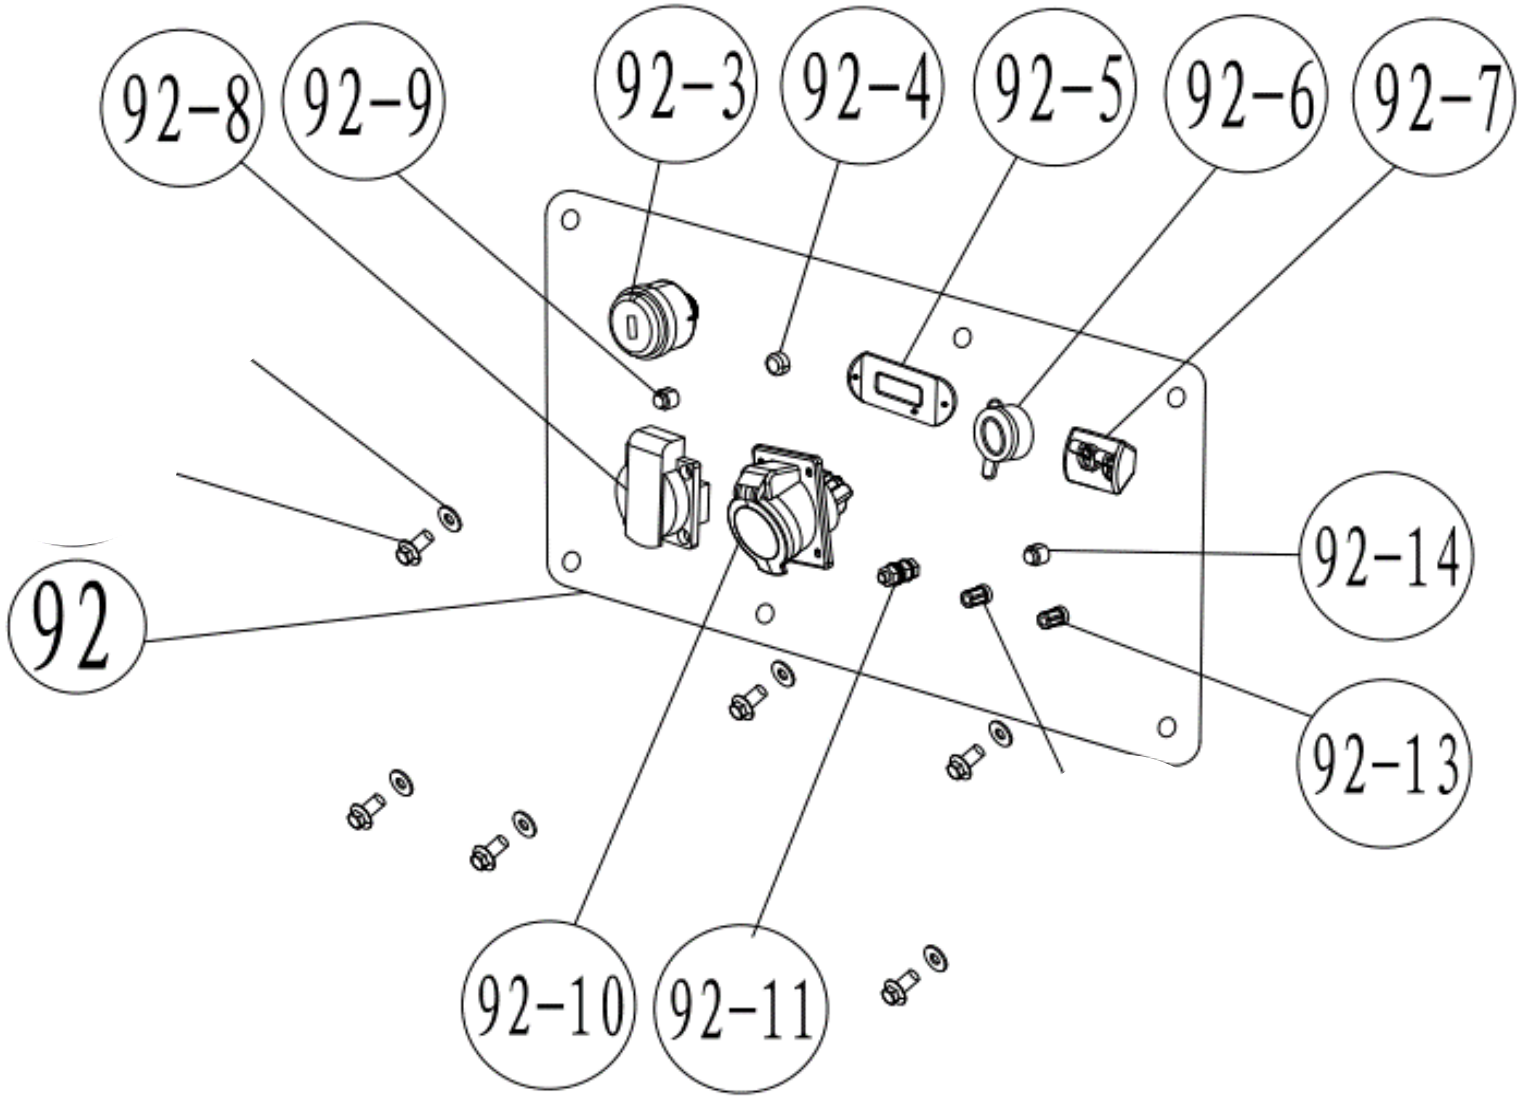
92-8
92-9
92-3
92-4
92-5
92-6
92-7
92
92-14
92-13
92-10
92-11


PMD5000s Stage V – Panel Assy

Position	Part Number	Description	Note
92	PEG00057	panel assy	
92-3	PEG00049	lock assy	
92-4	PEG00045	oil alert	
92-5	PEG00050	v.f.t. meter	
92-6	PEG00048	ats socket(6 cores)	
92-7	G075561	magneto thermal circuit breaker 20a	
92-8	G071131	plug	
92-9	PEG2.56.01.232400	circuit breaker 16a	
92-10	P3SN00055	socket 32a+ip44-2p+t	
92-11	G070109	dc socket positive 12v	
92-13	G070110	dc socket negative 12v	
92-14	PEG8.01.001585	dc circuit breaker 12v	

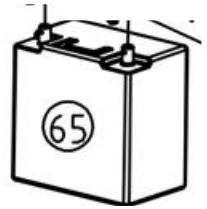


Position	Part Number	Description	Note
65	P3BT00029	battery 36ah	

PMD5000s Stage V – Muffler Assy

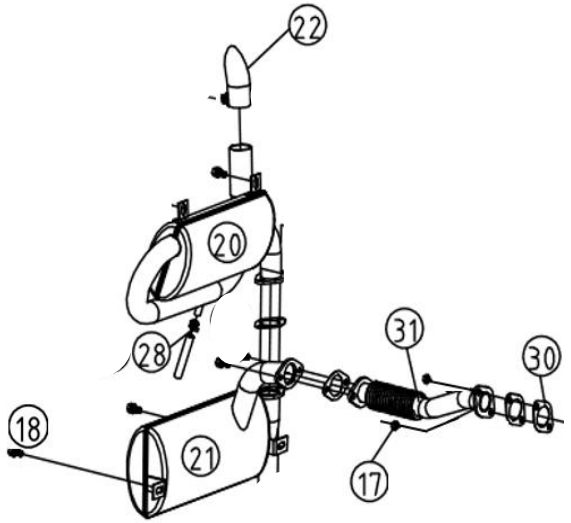

Position	Part Number	Description	Note
17	8.01.001573	self-locking nut m8	
18	2.63.01.01808	bolt m8*16	
20	PEG00106	lower muffler	
21	PEG00107	upper muffler	
22	8.01.001574	exhaust vent	
28	8.01.001575	rubber tube	
30	PEG00067	exhaust pipe silencer gasket	
31	PEG00108	exhaust pipe	

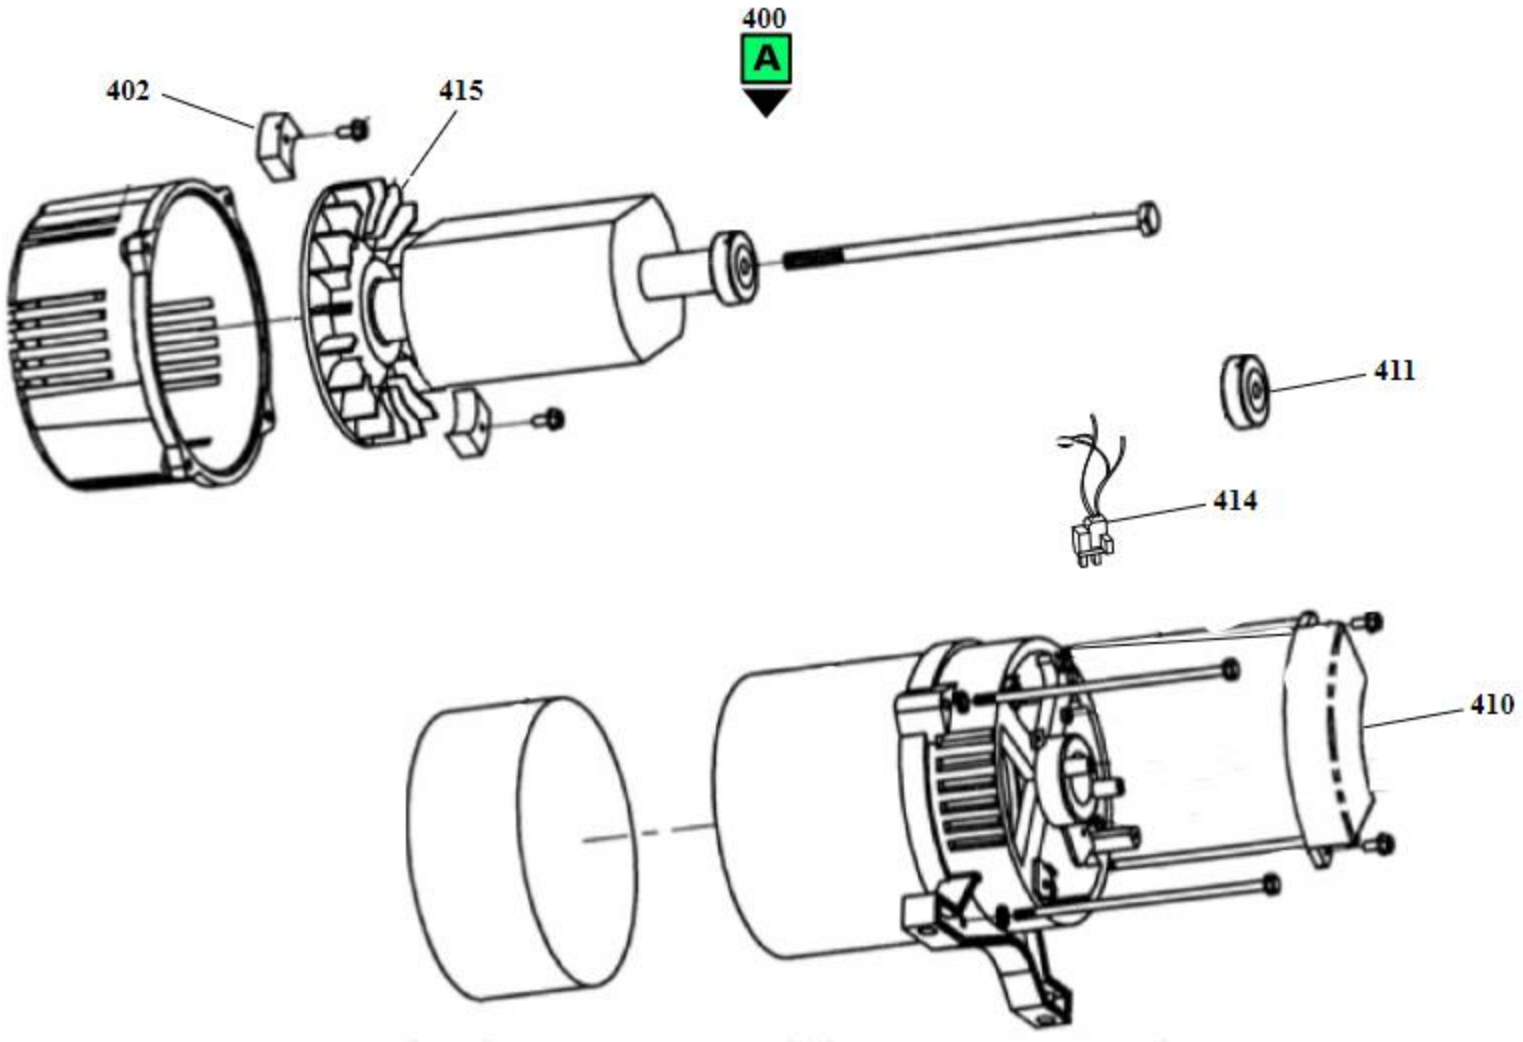

400
A
402
415
411
414
410


PMD5000s Stage V – Alternator Assy

Position	Part Number	Description	Note
400	PEG00025	ALTERNATOR kVA 5/115/230/50/3000/12 J609b output COP power 4.2kW	
402	PAA00001	DIODO 10A10/1000V	
410	PGT00141	AVR WX5000	
411	PAA00035	COLLETTORE	
414	PAA00104	BRUSH SUBASSEMBLY, CARBON 5000/8000	
415	PAA00012	VENTOLA PLASTICA	

PMD5000s Stage V- Engine Assy and Heat Insulation parts


Position	Part Number	Description	Note
1	PEG00029	engine assy SR186FA	
2	PEG00021	Oil sensor	

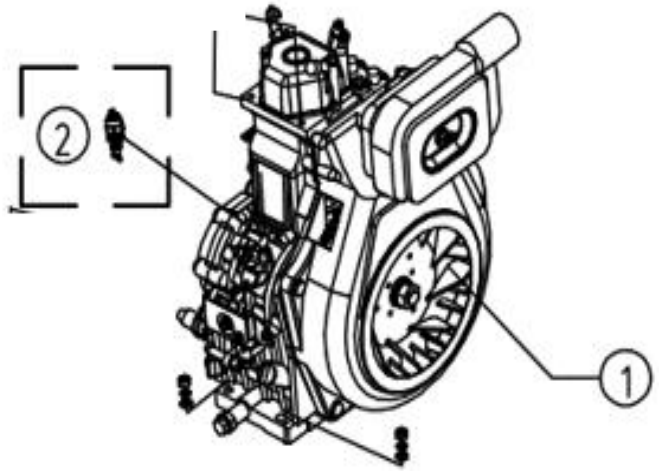

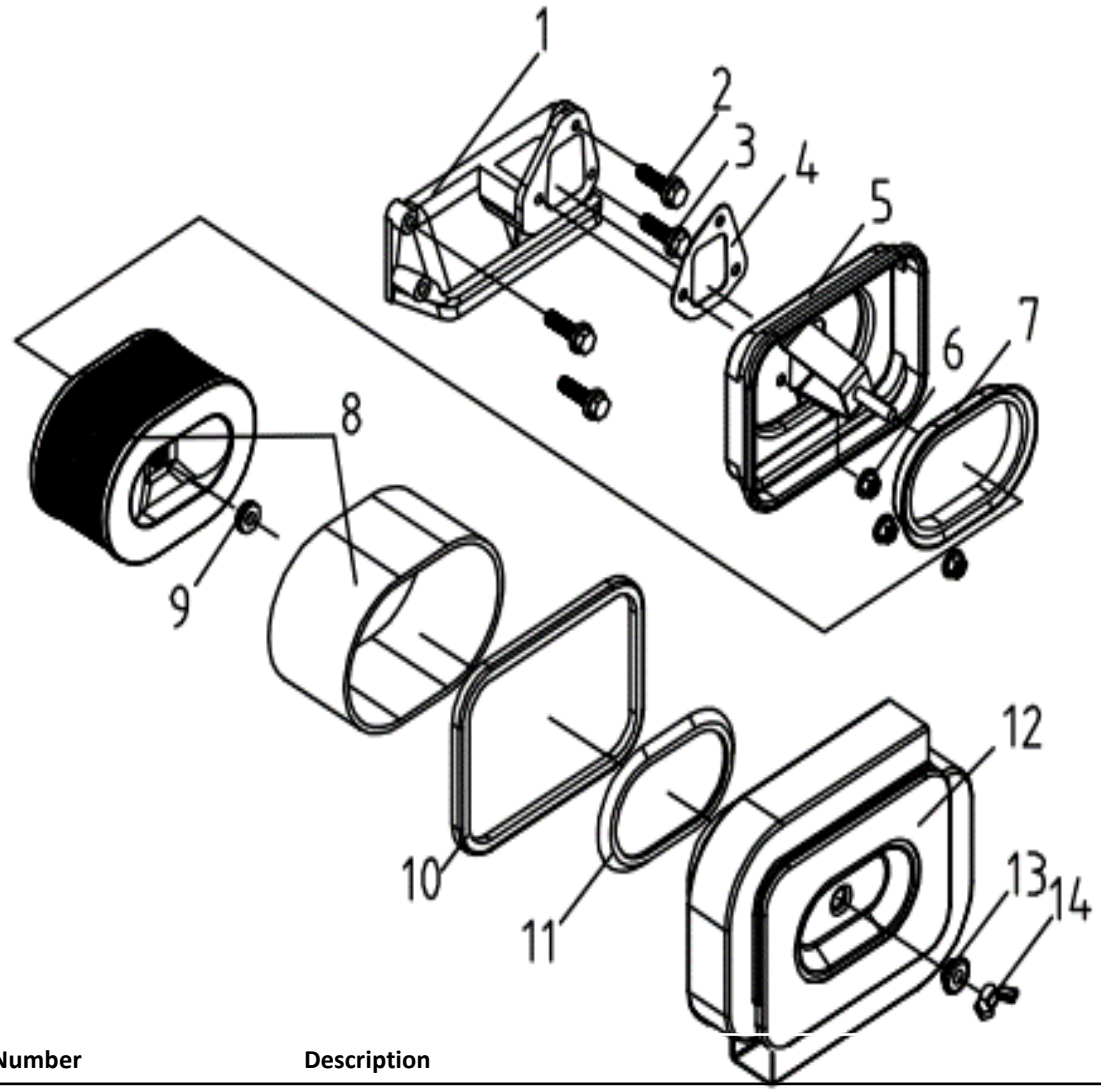


Position	Part Number	Description	Note
5-1	2.50.11.028800	Air filter assembly (5, 6, 7, 8, 9, 10, 11, 12, 13, 14)	
8	PEY00002	Air Cleaner Element	


PMD5000s Stage V – Fuel Injection Pump Assy & High Pressure Pipe Comp

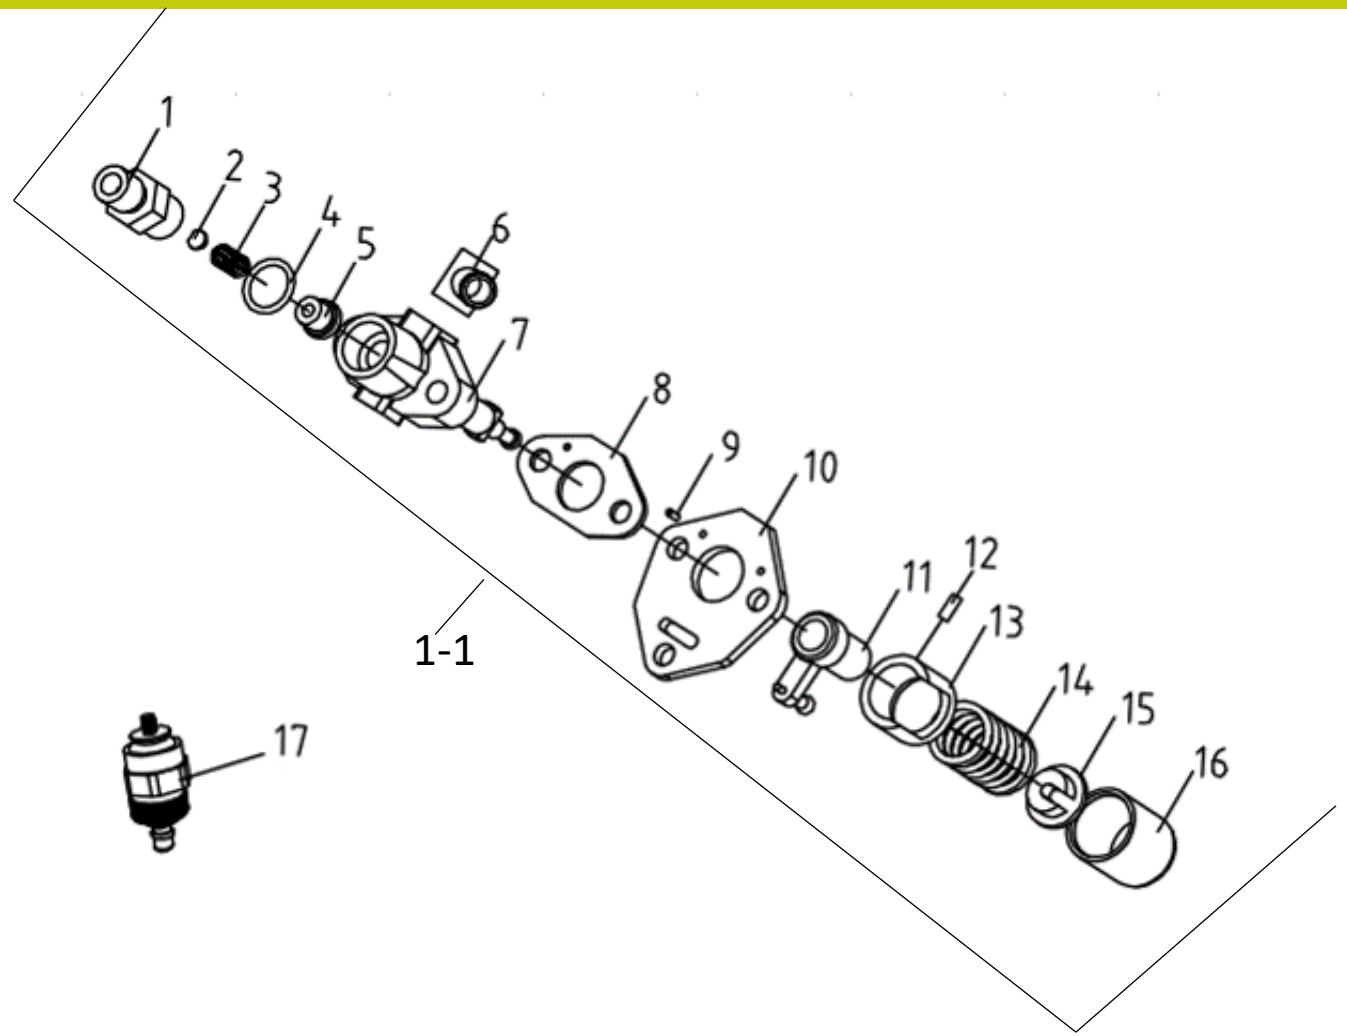


Position	Part Number	Description	Note
1-1	PEG00080	Fuel injection pump assembly with battery valve (1-18)	
17	PEG00100	Starter Magnetic Valve	

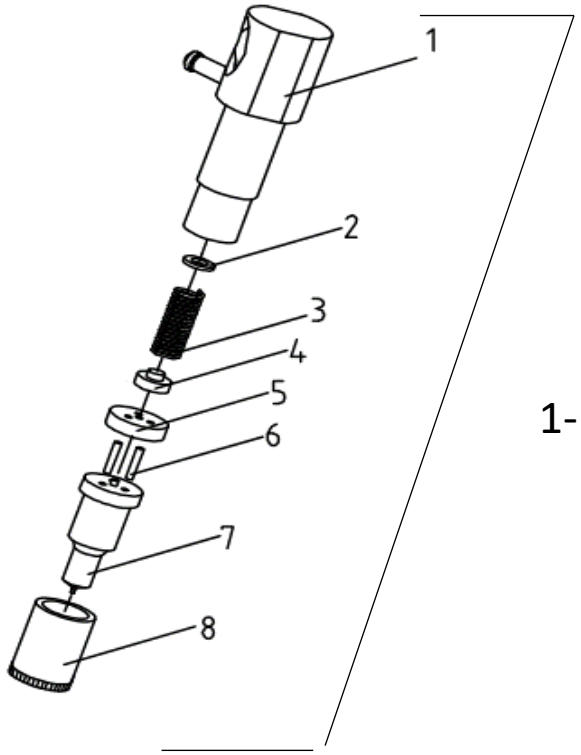

Position	Part Number	Description	Note
1-1	2.55.01.007400-1	Injector assembly (1-8)	

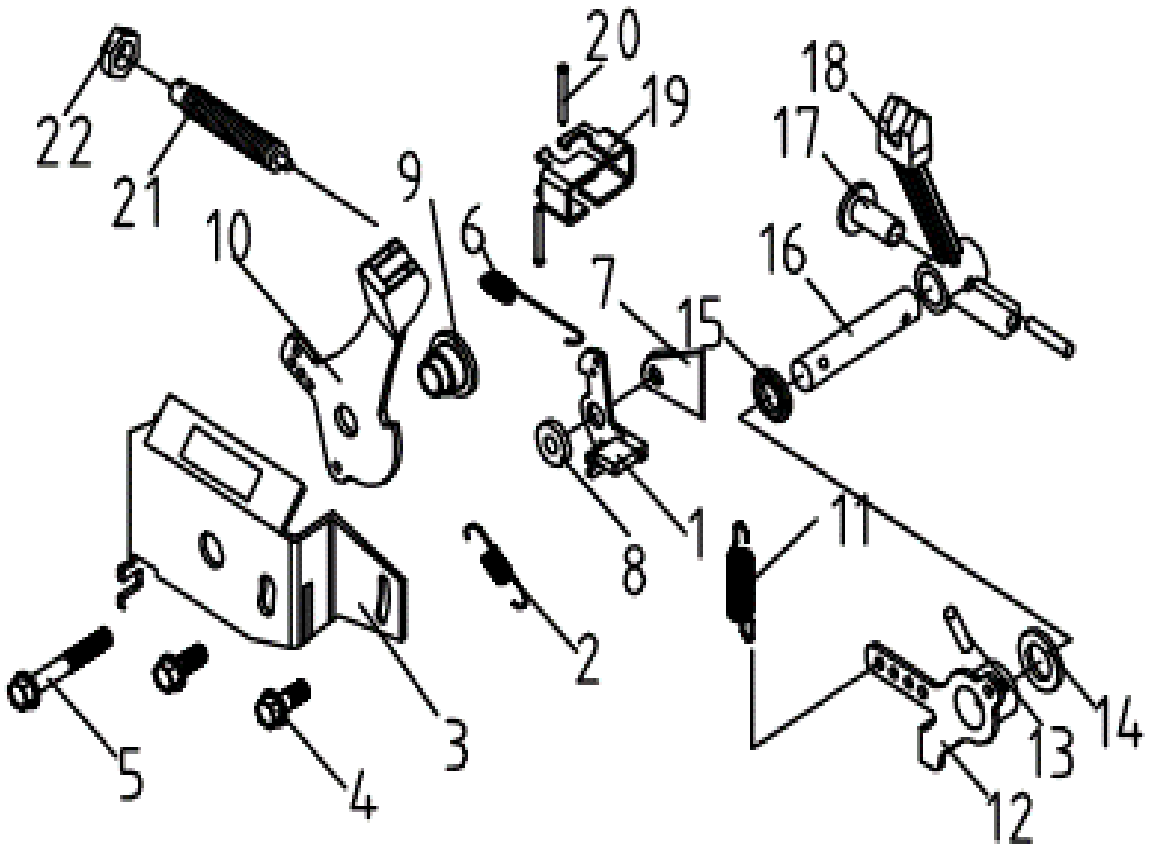

Position	Part Number	Description	Note
1-1	PEG2.54.01.004900	Speed control handle assembly (1, 3, 6, 7, 8, 9, 10)	

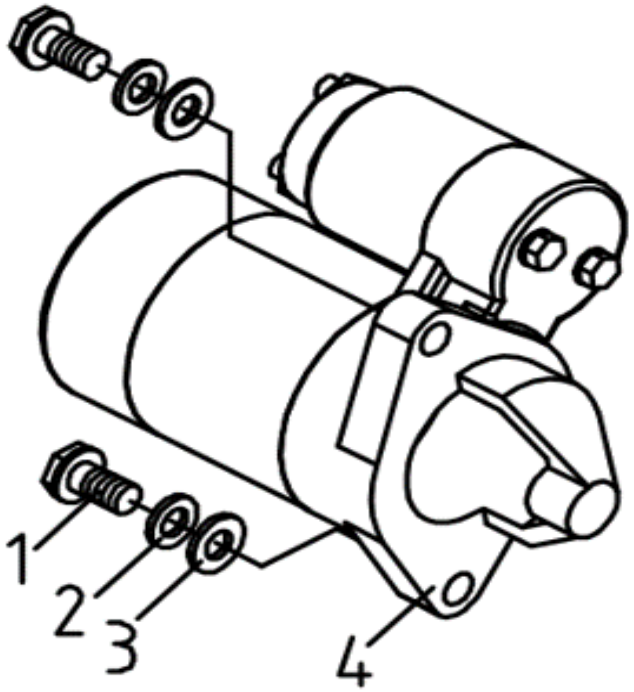

Position	Part Number	Description	Note
4	PEG00001	Starting Motor	



Position	Part Number	Description	Note
5	PEG00042	Stator	